


Auto Transform
Worker - Common Seating Configuration

3 Seater

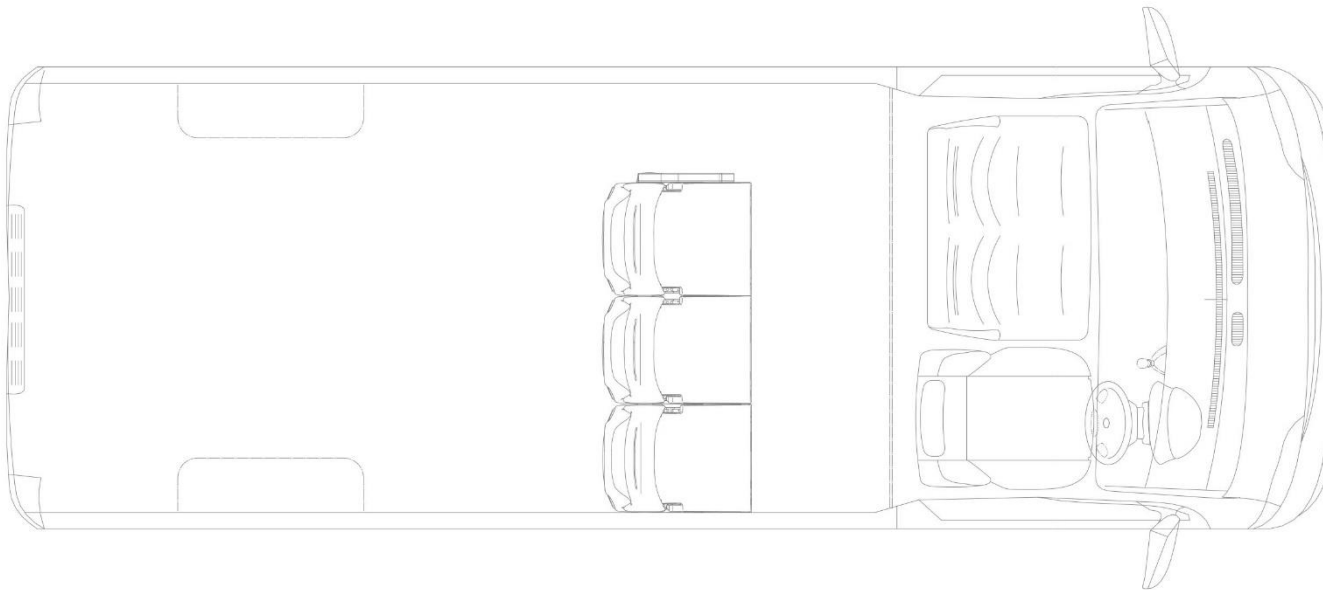

Auto Transform Seats that can be installed:

Bench:

Eco 1500

Commuter 2000

Commuter 2200

Bucket:

Suburban 4500

Suburban 4520


Luxury 4800

Common Vehicles

- Toyota Hiace – ZX/ZL
- Hyundai Iload
- Nissan Urvan/Caravan/NV350/e-NV200
- VW Crafter/Transporter
- Mercedes Sprinter/Vito
- Ford Transit Custom/Cargo
- Peugeot Expert
- Fiat Scudo/Ducato

Auto Transform
Worker - Common Seating Configuration

2+2

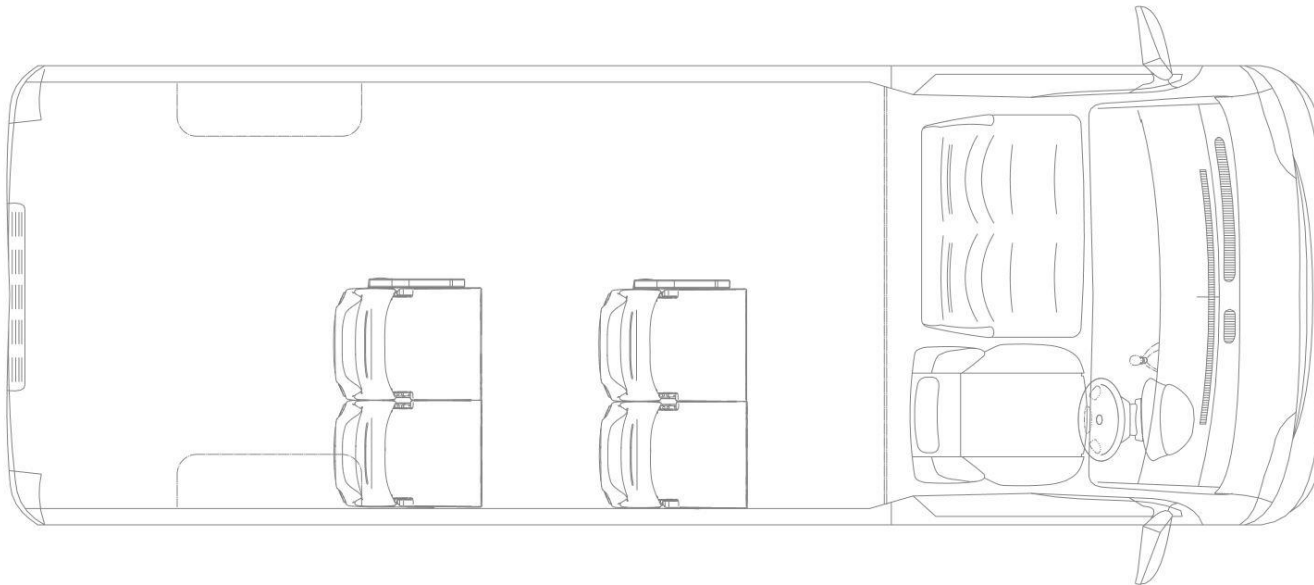

Auto Transform Seats that can be installed:

Bench:

Commuter 2000

Commuter 2200

Bucket:

Suburban 4500

Suburban 4520


Luxury 4800

Common Vehicles

- Toyota Hiace – ZX/ZL
- Hyundai Iload
- Nissan Urvan/Caravan/NV350/e-NV200
- VW Crafter/Transporter
- Mercedes Sprinter/Vito
- Ford Transit Custom/Cargo
- Peugeot Expert
- Fiat Scudo/Ducato

Auto Transform
Worker - Common Seating Configuration

3+3

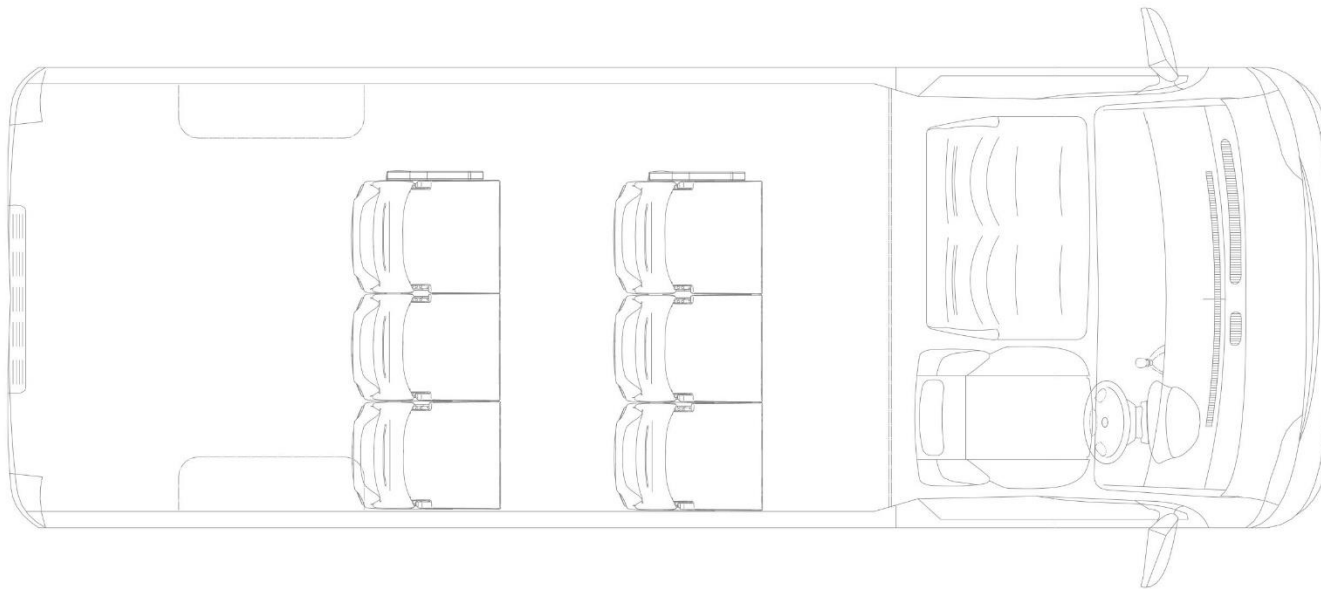

Auto Transform Seats that can be installed:

Bench:

Commuter 2000
Commuter 2200

Bucket:


Suburban 4500
Suburban 4520
Luxury 4800

Common Vehicles

- Toyota Hiace – ZX/ZL
- Hyundai Iload
- Nissan Urvan/Caravan/NV350
- VW Crafter/Transporter
- Mercedes Sprinter/Vito
- Ford Transit Custom/Cargo
- Peugeot Expert
- Fiat Scudo/Ducato

Auto Transform
Worker - Common Seating Configuration

3+2+3

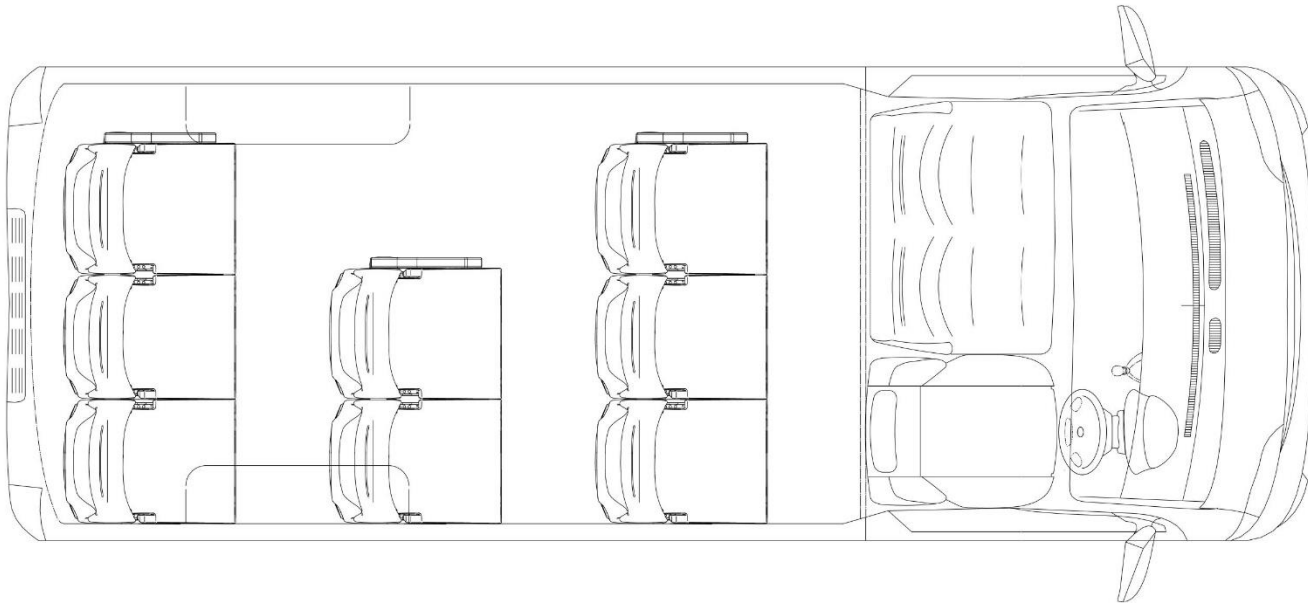

Auto Transform Seats that can be installed:

Bench:

Commuter 2000

Commuter 2200

Bucket:

Suburban 4500

Suburban 4520


Luxury 4800

Common Vehicles

- Toyota Hiace – ZX/ZL
- Hyundai Iload
- Nissan Urvan/Caravan/NV350
- VW Crafter/Transporter
- Mercedes Sprinter/Vito
- Ford Transit Custom/Cargo
- Peugeot Expert
- Fiat Scudo/Ducato

Auto Transform
Worker - Common Seating Configuration

3+3+4 Seater

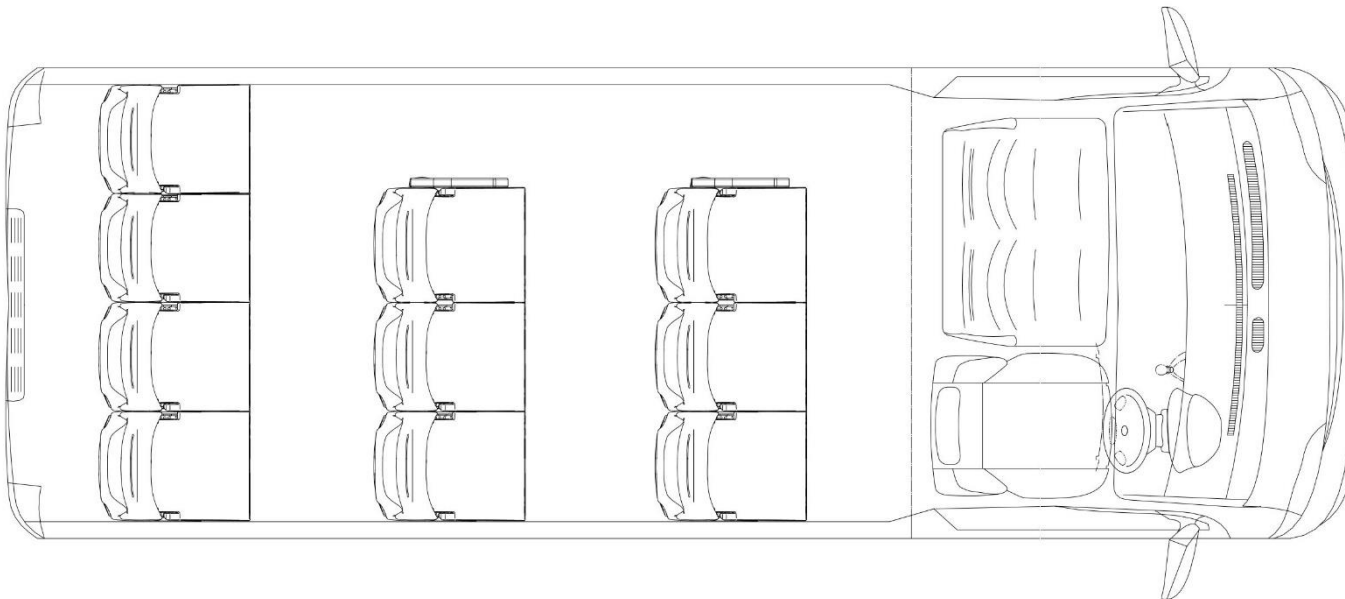

Auto Transform Seats that can be installed:

Bench:
Commuter 2000
Commuter 2200

Bucket:
Suburban 4500
Suburban 4520
Luxury 4800

Common Vehicles
- Toyota Hiace – ZX
- VW Crafter
- Mercedes Sprinter
- Ford Transit Cargo